



# Night Shark IP Subsea Camera

## USER MANUAL



# Night Shark IP - User Manual

## Revision History

Rev. No	Description	Date of Rev.
1.0	Issued for use	09.03.25
1.1	Added information on SmartView / Web interface	25.03.25
1.2	Latency figures added	01.04.25

## Contents

Contact .....	3
Warranty.....	4
1 General Description .....	4
1.1 Regarding these Instructions for Use .....	4
2 The Night Shark IP camera.....	5
2.1 Main Features.....	5
2.2 Typical use case.....	6
2.3 Remote display and control station .....	7
3 Technical Specification .....	7
4 Functional Description.....	8
4.1 Cabling and Networking Hardware .....	8
4.2 Ethernet pin-out.....	8
5 Installation Instructions.....	9
5.1 Unpacking and testing.....	9
5.2 Function test.....	9
5.3 Mechanical Installation.....	10
5.4 Electrical installation.....	10
5.5 Camera subsea connector .....	10
5.6 Adding the camera to a computer network.....	11
5.7 Network address.....	11
4 Operational Instructions .....	12
4.1 Hazards and protective measures .....	12



# Night Shark IP - User Manual

4.2	Over-temperature precautions.....	12
5	Displaying the video stream .....	14
5.1	Imenco SubVIS SmartView .....	14
5.2	Media players .....	14
5.3	Camera module settings.....	15
6	Maintenance .....	16
6.1	General maintenance .....	16
6.2	Service and Repair .....	16
7	Packing & Shipping.....	16

## Contact

for assistance / clarification on any of the contents of this manual, please contact:

**Imenco Future Technologies AS**

Kophaug 3

5570 Aksdal NORWAY

Tel: +47 52 86 41 00

E-mail: [imenco@imenco.com](mailto:imenco@imenco.com)

[www.imenco.com](http://www.imenco.com)

## Safety information

**IMPORTANT!** The Imenco Night Shark IP camera is a technically advanced product. Please make sure to read and understand all sections of this manual before installing or operating this product. Installation of this product should only be performed by qualified personnel.

**WARNING!** *This product contains no user serviceable parts. Do not open, alter or disassemble this product.*

Failure to comply with this warning can result in damage to equipment and void of warranty. The camera is filled with inert gas at manufacture.

**WARNING!** *The housing is NOT connected to any Protective Earth circuits.*



# Night Shark IP - User Manual

The metal housing has no electrical contact with any of the circuits inside the camera. This is to isolate the camera housing from other equipment that includes dangerous high voltage and to minimize corrosion that otherwise might be intensified by electrical contact to other nearby metal equipment or structures exposed to the sea water.

## Warranty

Be sure to read and comply with **Imenco's Terms & Conditions** that the Night Shark IP Camera was sold under.

— — — — —

## 1 General Description

### 1.1 Regarding these Instructions For Use

The intended use of these instructions is to provide and guide the operator / user of the equipment with instructions on the technical specifics of the product, how it functions, the safety aspects of its use, how to prepare, operate and maintain the product.

*All information in this document is provided commercial in confidence and shall not be published or disclosed, wholly or in part to any other party without Imenco's written permission.*

*Copyright © 2025 Imenco Future Technologies. All Rights Reserved.*



# Night Shark IP - User Manual


## 2 The Night Shark IP camera

The focus settings of this camera are calibrated for underwater use and have a limited focus area in air.

Actual camera:



Camera block diagram:

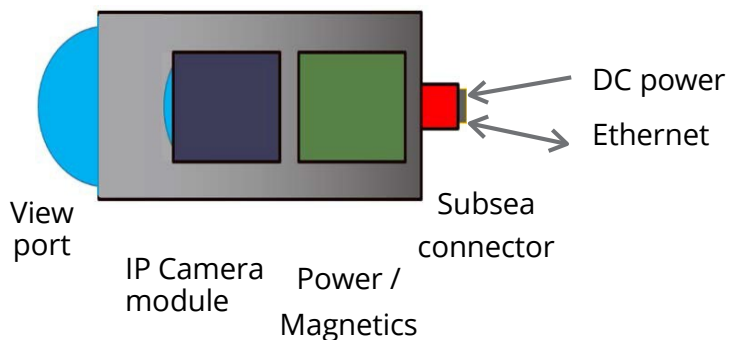

*Figure 1, Night Shark IP camera*

### 2.1 Main Features

- HD 1080p / 30fps Video Streaming over Ethernet
- Ultra High Light Sensitivity
- 6.000 m Titanium Housing
- 24VDC or PoE version



## Night Shark IP - User Manual

### 2.2 Typical use case

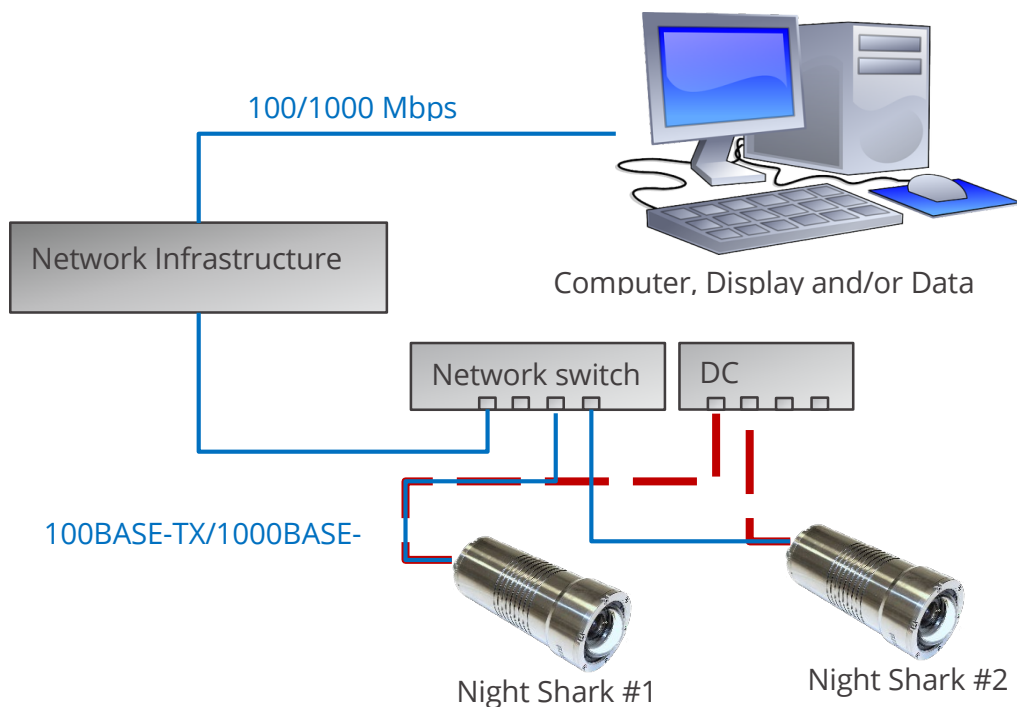


Figure 2, System example

Each camera in Figure 2 is connected to the rest of the world, for control and video streaming, through a 1000BASE-T compliant cable. In a minimum system, this cable could go directly to the Network port of a suitable computer that has software (e.g. Imenco SmartView) installed for decoding and using the received video.

The Ethernet communication of the two Night Shark IP in Figure 2 are combined in a Switch and routed through various other Networking hardware before connected to the client computer. Beware that the network infrastructure and other network hosts between the Night Shark IP camera and the Client computer could potentially impose heavy traffic and delays in the video, which is unacceptable for the operator. The installer must take measures to avoid that.

*Cameras pinned out with only 2 Ethernet pairs (4 wires) could encounter connection problems when connected to Gigabit Ethernet switches. Appropriate settings must be altered in the switches to accommodate for this.*



# Night Shark IP - User Manual

## 2.3 Remote display and control station

Video Streaming and User Interface in the camera is realized with Internet protocols over Ethernet.

A computer with sufficient graphics performance and network interface can be used to operate and view / record video from the Night Shark IP camera.

Camera setup can be performed by the built-in web interface.

This Imenco camera can be supplied together with the Imenco SmartView software for viewing, frame snapshots and video recording, please refer to the SmartView User manual for these functions.

## 3 Technical Specification

Video format	1080p @ 30fps / Monochrome
Communication & video interface	Ethernet 100BASE-TX / 1000BASE-T
Video Compression	H.264 AVC
Supported protocols	TCP/IP, UDP/IP, RTP, (RTCP), RTSP, SNTP, HTTP, FTP, DHCP, DNS, UPnP
Recommended bitrate	8 Mb/s (max 20Mb/s)
Latency 1080p@30 / 720p@60	170ms / 140ms
<b>Default IP address</b>	<b>192.168.1.2</b>
Lens system	Fixed aperture / fixed focus
Field of View in seawater – 2,9 Lens	130° dia. / 124° hor.
Minimum illumination	0.0001 lx. F1.4 (AGC HIGH=72dB, Shutter=OFF)
Minimum working distance	0,3 m
Front Port	BK7 Glass Dome
Housing material	Titanium
Depth rating	6.000 m
Body diameter	79 mm / 74 mm
Length (excl. connector)	180 mm
Power requirements	24VDC (10 – 36) / 5W or PoE (separate models)
Standard Connector	DBCR2013 / 5506-1508
Mass in air	2,0 Kg
Mass in seawater	1,2 Kg



## 4 Functional Description

### 4.1 Cabling and Networking Hardware

The standard connector on the Night Shark IP camera is a SubConn® Ethernet Series Power / Ethernet Circular 13 pins type.

Imenco offers customer specified (Cat5e approved) connectors and cabling with the Night Shark IP camera. Contact Imenco to work out a solution for other than standard connectors.

The IEEE standards 100BASE-TX and 1000BASE-T defining 100Mb/s and 1000Mb/s data rates over twisted pair copper cables recognize up to 100 m length between nodes. Pay special attention to the choice of connectors, cable and method of wire termination in an actual Night Shark IP installation and make sure it performs to the above standards. Test the solution before committing to work.

The distance from the camera to the network port is usually just a few meters, such as when the camera is installed on an ROV. The equipment behind that network port may include fibre optic sections (through the umbilical of the ROV) that extend to the remote station on surface. Signal transmission and networking hardware after the first network port is outside the scope of this manual. This is left to qualified personnel who are competent to install, configure and diagnose computer networks. Imenco does not support installation of such equipment.

**IMPORTANT!** *The camera housing is not connected to Protective Earth.*

### 4.2 Ethernet pin-out

Transceiver ports:		
1000BASE-T	100BASE-TX	Pin no
BI-DA +	Transmit +	1
BI-DA -	Transmit +	2
BI-DB +	Receive +	3
BI-DC +		4
BI-DC -		5
BI-DB -	Receive -	6
BI-DD +		7
BI-DD -		8

*Table 2, Ethernet RJ45 Port*



# Night Shark IP - User Manual

**IMPORTANT!** The Ethernet wiring must comply with IEEE 1000BASE-T all the way through subsea connectors and cabling to the next network node.

## 5 Installation Instructions

Make sure that **Imenco's Terms & Conditions** are followed when using this product.

### 5.1 Unpacking and testing

When having received the camera, do a visual inspection for damage of the packet or any of the parts.

The packet should include:

- Night Shark IP camera
- USB Memory Stick with User Manual and Config Software/Settings File
- Pressure test certificate
- Quality control certificate

### 5.2 Function test

A preliminary function test should be performed prior to full scale installation. This is to familiarize the user with the control functions and to verify that the system is fully operational after shipment.

Follow these steps to power up and check the proper functioning of the camera:

- 1) Acquire a cable that is terminated in one end with a connector compatible with the Night Shark IP camera connector as specified in this document and the other end is split into a Cat5e network cable with RJ45 termination for the computer as well as a DC-power cable.
- 2) Clear necessary space on your working desk and gather the:
  - a. Night Shark IP camera
  - b. Power supply providing DC anywhere between 9V and 36V, minimum 10W or PoE from a switch / inserter (please ensure which model you have)
  - c. Computer with necessary software installed
  - d. Test cable
- 3) Lubricate the subsea connector and mate it properly.



## Night Shark IP - User Manual

- 4) Connect the network cable and start the computer.
- 5) Now turn on the power to the Night Shark IP.
- 6) Start streaming the video and check its quality and the camera control functions. Understand that view angles / focus area in air are not as in water.

### 5.3 Mechanical Installation

Installation of this product should only be performed by qualified personnel. Do not open the camera when carrying out the installation. Mount the camera on a secure and vibration free surface and strap the cable for stress relief to the supporting structure.

The camera should be electrically isolated from the mounting base to minimize any corrosion current between the relatively noble Titanium housing of the camera and surrounding metal structures.

### 5.4 Electrical installation

#### IMPORTANT!

- Installation of this product should only be performed by qualified personnel.
- Verify that the connector pin assignments match with the system where the camera is being installed. Mind the connector pin numbers and wire colours as necessary.
- Do not connect/disconnect the subsea connector when the power is ON.

### 5.5 Camera subsea connector

Imenco delivers the camera with a standard connector of type SubConn® DBCR2013 unless the customer specifies otherwise. A connector & cable that has not been tested before should be verified to meet all system specifications before the camera can be used.

Standard Subsea connector type pin-out:

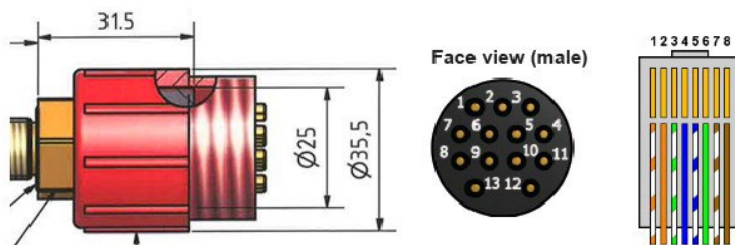


Figure 5, Night Shark IP camera - standard connector and RJ45 plug with T568B colours



# Night Shark IP - User Manual

The wires from this connector internally in the camera are colour coded and connected to terminals of the camera electronics as indicated in Table 4. The Ethernet twisted pairs are terminated according to T568B as shown with an image of a RJ45 plug in Figure 5 and colour names in Table 4.


 
 










Night Shark IP camera				
Internal electronics		SubConn® DBH-13-M:		
Terminal Description	Number	Internal Wire colour	Conductor	
Power in <b>Minus</b>		 <b>Black</b>	<b>1</b>	<b>DC Power</b>
<i>Not connected</i>		 <b>Orange</b>	<b>2</b>	
Power in <b>Plus</b>		 <b>White</b>	<b>3</b>	
BI-DA + / Transmit +	RJ45-1	 <b>White/Orange</b>	<b>9</b>	<b>Twisted pairs</b>  <b>T568B colour scheme</b>
BI-DA - / Transmit -	RJ45-2	 <b>Orange</b>	<b>8</b>	
BI-DB + / Receive +	RJ45-3	 <b>White/Green</b>	<b>11</b>	
BI-DC +	RJ45-4	 <b>Blue</b>	<b>6</b>	
BI-DC -	RJ45-5	 <b>White/Blue</b>	<b>7</b>	
BI-DB - / Receive -	RJ45-6	 <b>Green</b>	<b>10</b>	
BI-DD +	RJ45-7	 <b>White/Brown</b>	<b>5</b>	
BI-DD -	RJ45-8	 <b>Brown</b>	<b>4</b>	
		 <b>Red</b>	<b>12</b>	<b>Optional use</b>
		 <b>Green</b>	<b>13</b>	

Table 4, Night Shark IP camera standard subsea connector pinout (Ethernet connected as T568B)

## 5.6 Adding the camera to a computer network

The camera must be connected to a computer that functions as the remote control and video viewing / recording station.

## 5.7 Network address

The camera can obtain its network address automatically through DHCP, but the client that wants to connect to the camera may have difficulty to find which address the camera was assigned.

If the camera is connected to the DHCP service in a private network, then its host number (xxx, yyy in this table) will be unknown for a potential camera client on the same network:

10.	0-255.	xxx.	yyy
172.	16-31.	xxx.	yyy
192.	168.	xxx.	yyy



# Night Shark IP - User Manual

The default setting of the camera is therefore a fixed network address selected by the user. The fixed network address configuration of one device is not recommended in a DHCP controlled network since it can cause address conflicts with other devices on the same network.

Running the camera on your office network is not advised because of the large and constant data output. The intended use of the Night Shark IP camera is to assign each camera a fixed network address within a closed network.

## Imenco Default IP and Login

IP Address	192.168.1.2
Netmask	255.255.255.0
Gateway	192.168.1.1
Username (case sensitive)	imenco
Password (case sensitive)	ImencO123_@.

## 4 Operational Instructions

### 4.1 Hazards and protective measures

The Night Shark IP camera does not generate or use dangerous high electrical voltages. The camera is filled with inert gas at atmospheric pressure. Follow the safety information at the beginning of this manual.

### 4.2 Over-temperature precautions

The camera is designed for operation in water that will absorb the heat generated by the camera. Imenco acknowledges that the camera must be checked on deck before operation as well as tested and demonstrated in house, but the conditions when operating the camera in air may not provide sufficient cooling. Remember that sunlight and/or high outside temperature will add significant heat to the camera.



## 4.3 Factory Reset

To reset the camera to Imenco Default Settings, log in to the camera Web Interface and go to Save/Load Settings. Click "Load Settings from File" and select the file in the USB-drive provided by Imenco called "WAT-933\_Setting.set".

This will revert the camera's image login information, image settings and IP setup to the Imenco default.

If the "System Reset" option is used to reset the camera, the username will be set to "root".

The password will be constructed using the camera module's serial number and the last two characters of the MAC address.

Example:

Serial number: W51512345

MAC address: C4:7C:8D:30:AB:CD

The password will then be: W51512345CD.

**Note:** *The Serial Number / MAC address can be found in the cameras QC-document.*

### CAUTION:


*When operating the camera in air or unusually hot water, apply active cooling to always keep the temperatures below 60°C / 140 °F.*



## 5 Displaying the video stream

### 5.1 Imenco SubVIS SmartView

If controlled by the Imenco SmartView software, the Night Shark IP camera can be selected from the "Camera setup" tab and necessary configurations for this camera will be set in the viewer. If the IP address of the camera is set to other than default, this must be altered. See the "Imenco SubVIS SmartView User Manual" for more information.

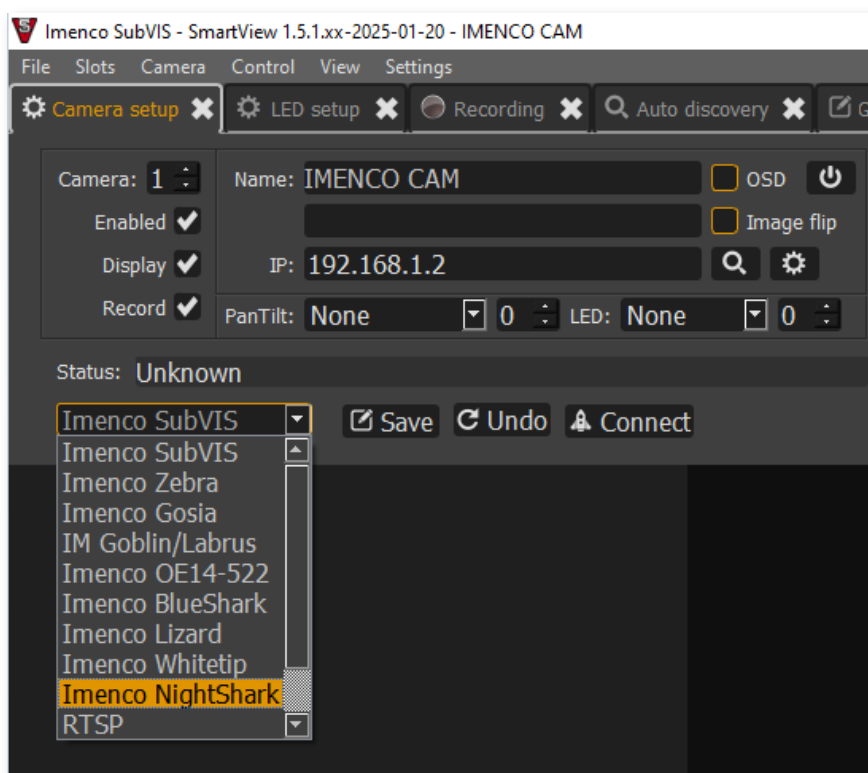

### 5.2 Media players

To view the video stream from the Night Shark IP Camera in a 3. Party media player like VLC, paste in the following URL: **rtsp://192.168.1.2:554/h264**

Please be aware that most standard media players are not optimized for low latency streaming and can add a considerable amount of delay.




## Night Shark IP - User Manual

### 5.3 Camera module settings

The camera module settings can be altered via the built in Web Interface of the module. To login, go to the current camera IP address in a browser.

The available menu options for network, image and video settings are:

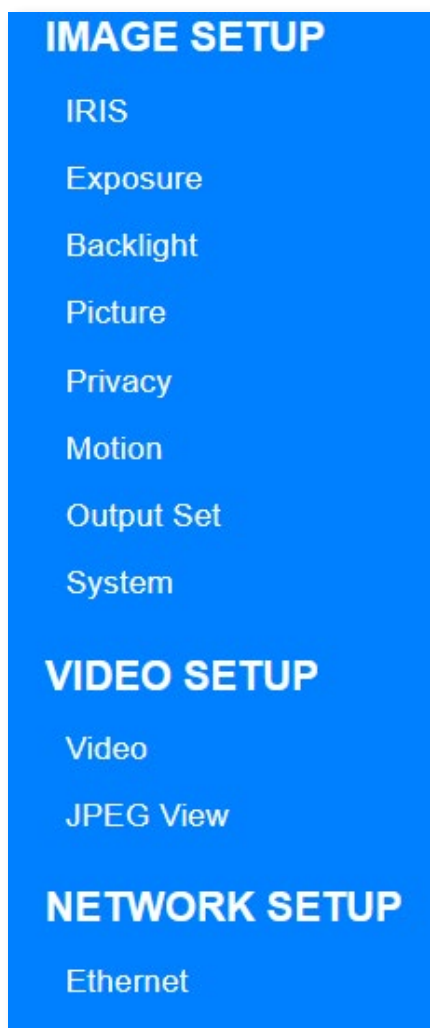

Digital Noise reduction can be adjusted in the "Output Set" menu. Resolution, framerate and bitrate is set in the "Video" menu.



# Night Shark IP - User Manual

## 6 Maintenance

### 6.1 General maintenance

After use in seawater or other corrosive environments, rinse the unit and cables in fresh water.

Inspect the front port for dirt and dust and remove any surface dirt using compressed air. Clean the front port glass using a mild detergent and a soft cloth. Do not use alcohol or solvent based cleaning solutions because that could damage the pressure seals and glass coating. Avoid circular wiping patterns.

Reapply silicon-based lubricant to the connector regularly as needed.

### 6.2 Service and Repair

This product contains no user serviceable parts. Service and modifications are to be carried out by Imenco personnel or by qualified third party after appointment. Failure to comply may result in personal injury, damage to equipment and loss of warranty.

If the Night Shark IP camera seems to be not working properly, please try to speed up the service that Imenco can provide by describing the problem in specific terms from the person who have first handed observed the fault. Remember if necessary to describe the system where the camera is installed since the root cause sometimes can originate outside a failing part in an advanced system.

## 7 Packing & Shipping

The packing & shipping of the goods shall generally be according to Imenco's approved procedures.

### Warning:

*The Night Shark IP camera includes fragile parts which must not be subject to vibrations and shock during transport.*

-----